

The EDGE[®] Estimator can be licensed three ways

Each license is similar, but with different levels of functionality. This way, you buy only what you need, to maximize your investment.

1. FULL/STANDARD LICENSE:

Quantity input method: You can complete electronic takeoffs from the computer screen, digitize from a blueprint (electronic takeoff digitizer required), draw manually and directly enter/change quantities.

Functionality: Allows full input and drawing functionality including creating jobs, bringing in conditions, adjusting material prices and productions, changing markups and printing reports.

Application: Used for both takeoff and estimating tasks.

2. MANAGEMENT SYSTEM, MANUAL ENTRY LICENSE:

Quantity input method: You cannot complete electronic takeoffs, digitize or draw manually. You can directly enter quantities or change any quantities that have been digitized or manually entered.

Functionality: Directly enter/adjust quantities but no digitizing/drawing. All other program functions are permitted.

Application: Management or Estimators would use this to adjust and review estimates (subject to limitations above).

3. MANAGEMENT SYSTEM, REVIEW LICENSE:

Quantity input method: Does not permit any quantification including digitizing/drawing or manual entry/alteration of quantities.

Functionality: No manual entry/adjustment of quantities or digitizing/drawing. All other program functions are permitted.

Application: Management or Estimators would use this to adjust and review estimates (subject to limitations above).

Bid sharp. Build sharp.[®]

561-276-9100 | www.estimatedge.com